

AirFlush urinal components – urinal bowl not shown



The 110mm push fit fan housing



Looking down inside

The fan can be replaced through the screwed access cap on the side.



The fan with connecting lead



Rear of the power supply – 9V or 12V available

The fan lead comes out through the side of the 110mm housing and has a push fit connection to the power supply lead. The connection should be kept dry. The mains lead on the power supply must go to a fused spur.



One way trap

The RH socket leads to a urine drain. This could be a mains sewer or onsite soakaway for urine. The vertically directed socket leads to a 110mm pipe and the AirFlush fan. The socket pointing to the L connects to the urinal/s. Below this is a screwed access cap for cleaning out.



Two way trap

Same as above, except that there are LH and RH connections for urinals.

NATSOL: 01686 412653 tech@natsol.co.uk